



# iPhone 7 Lightning Connector Assembly Replacement

Replace the Lightning connector assembly in an iPhone 7.

Written By: Scott Havard



## INTRODUCTION

Is your phone not detecting your charging cable? Does your charging port feel loose? It might be time to replace your Lightning connector assembly. Use this guide to replace the Lightning connector assembly which includes the lower microphones, antenna cable, and Lightning connector.

Note that this repair does require a fair amount of disassembly, and it will require time and caution.

Opening the iPhone 7 will damage the waterproof seals on the display. If you do not [replace the adhesive seals](#), your phone will function normally, but will no longer be water-resistant.



### TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iOpener](#) (1)
- [Suction Handle](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Tri-point Y000 Screwdriver Bit](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Standoff Screwdriver for iPhones](#) (1)





### PARTS:

- [iPhone 7 Lightning Connector Assembly](#) (1)
- [iPhone 7 Lightning Connector Cable Conductive Adhesive](#) (1)
- [iPhone 7 7 Plus Lightning Connector Grounding Spring Contact](#) (1)
- [iPhone 7 Lightning Port Gaskets](#) (1)
- [iPhone 7 Lightning Port Bezel](#) (1)


## Step 1 — Pentalobe Screws



-  Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- Power off your iPhone before beginning disassembly.
-  Opening the iPhone's display will damage its waterproof seals. If you do not replace the seals, your phone will no longer be water resistant.
- Remove the two 3.4 mm pentalobe screws on the bottom edge of the iPhone.

## Step 2 — Opening Procedure



-  Heating the lower edge of the iPhone will help soften the adhesive securing the display, making it easier to open.
- Use a hairdryer or [prepare an iOpener](#) and apply it to the lower edge of the iPhone for about a minute in order to soften up the adhesive underneath.



### Step 3



- Attach a suction cup to the lower half of the display assembly, just above the home button.
  - ⓘ Be sure the suction cup does not overlap with the home button, as this will prevent a seal from forming between the suction cup and front glass.


### Step 4



- Pull up on the suction cup to create a small gap between the display assembly and the rear case.
- Insert the flat end of a spudger into the gap.
  - ⓘ The watertight adhesive holding the display in place is very strong, and creating this initial gap takes a significant amount of force. If you're having a hard time opening a gap, rock the screen up and down to weaken the adhesive until you can fit a spudger inside.



## Step 5

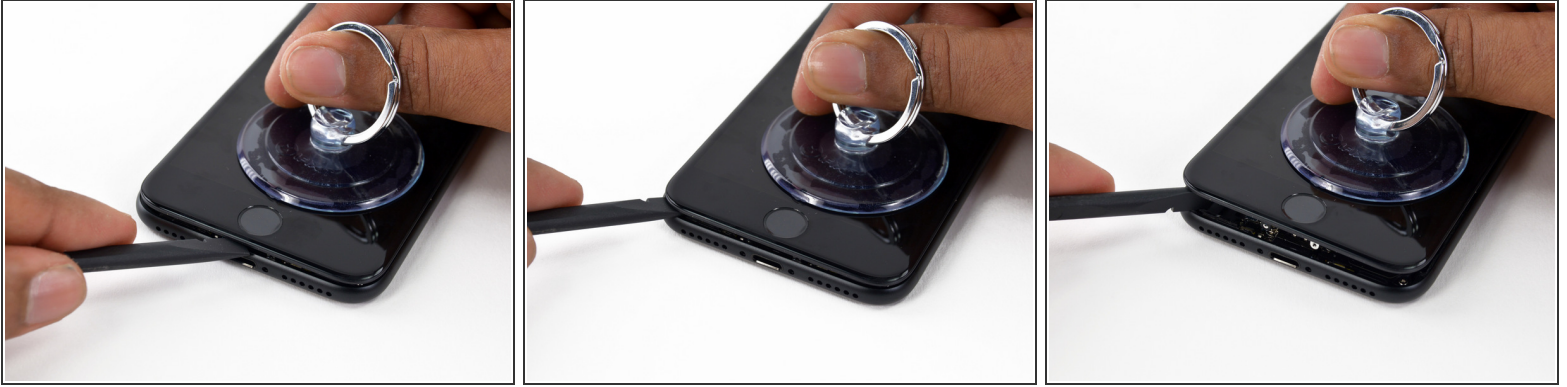


- Slide the spudger to the left along the lower edge of the iPhone.
- Twist the spudger to widen the gap between the display and rear case.

## Step 6



- Slide the spudger up the left side of the iPhone, starting at the lower edge and moving towards the volume control buttons and silent switch.


 Do not pry along the top edge of the phone, you risk damaging the plastic clips securing the display.

## Step 7




- Insert the flat edge of a spudger into the bottom right corner of the device.
- Twist the spudger to widen the gap between the display assembly and the rear case.
- Slide the flat end of the spudger up the right side of the phone to break up the adhesive holding the display in place.

## Step 8

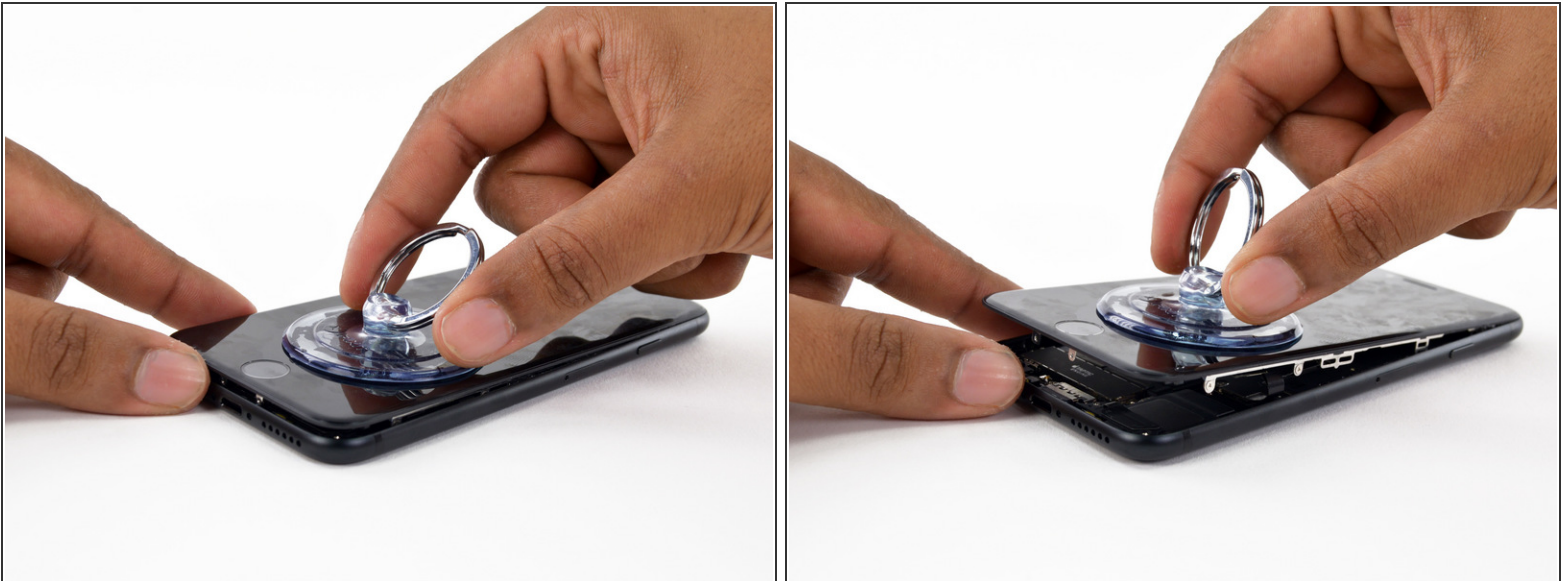

- Pull up on the suction cup to lift up the display and open the iPhone.

 **Do not raise the display more than 10°** as there are ribbon cables along the right edge of the device connecting the display to the logic board.

## Step 9



- Pull up on the small nub on the suction cup to remove it from the front panel.

## Step 10



- Slide an opening pick along the top edge of the iPhone, between the rear case and front panel, to break up the remaining adhesive holding the screen in place.

 Be careful not to damage the plastic clips on the top edge of the phone.



## Step 11



- Pull the display assembly slightly away from the top edge of the phone to disengage the clips holding it to the rear case.
  - Open the iPhone by swinging the display up from the left side, like the back cover of a book.
- ⚠ Don't try to fully separate the display yet, as several fragile ribbon cables still connect it to the iPhone's logic board.

## Step 12 — Battery Disconnection



- Remove the following tri-point Y000 screws from the lower connector bracket:
  - Three 1.2 mm screws
  - One 2.4 mm screw


## Step 13



- Remove the lower connector bracket.

## Step 14



- Use the point of a spudger to lift the battery connector out of its socket on the logic board.
-  Bend the connector cable up slightly to prevent it from making contact with the socket and providing power to the phone.



## Step 15 — Display Assembly



- Use the flat end of a spudger or a fingernail to disconnect the two lower display connectors by prying them straight up from their sockets on the logic board.
- ☞ To reconnect these cables, press down on one end until it clicks into place, then repeat on the opposite end. **Do not** press down on the middle. If the connector is even slightly misaligned, the connector can bend, causing permanent damage.

## Step 16



- Remove the two 1.3 mm Phillips screws securing the bracket over the front panel sensor assembly connector.
- Remove the bracket.



## Step 17



- Disconnect the front panel sensor assembly connector from its socket on the logic board.

✦ This press connector should also be reconnected one end at a time to minimize the risk of bending.

## Step 18



- Remove the display assembly.

✦ During reassembly, pause here if you wish to [replace the adhesive around the edges of the display](#).

## Step 19 — Barometric Vent



- Remove the two 1.9 mm Phillips screws securing the barometric vent to the rear case.


## Step 20



- Remove the vent.



## Step 21 — Taptic Engine

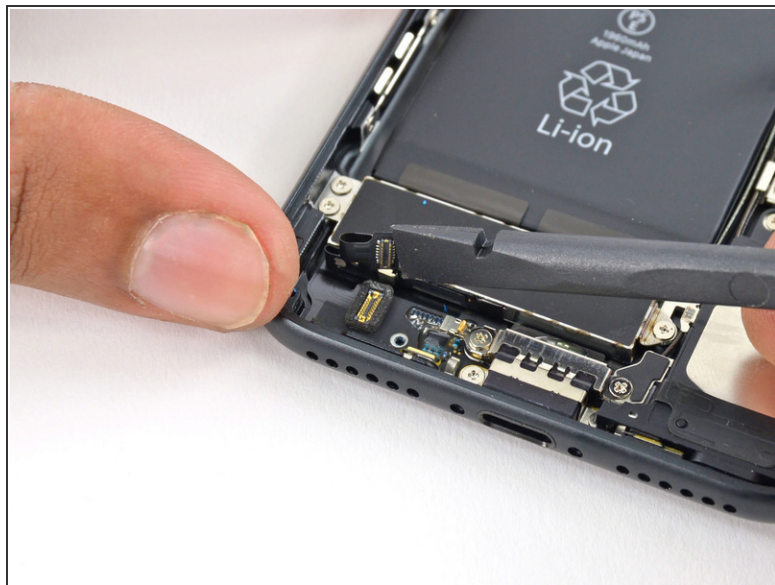

- Use the flat end of a spudger to disconnect the Taptic Engine connector from its socket on the logic board.


## Step 22



- Remove the three 1.6 mm Phillips screws securing the Taptic Engine to the rear case.



## Step 23

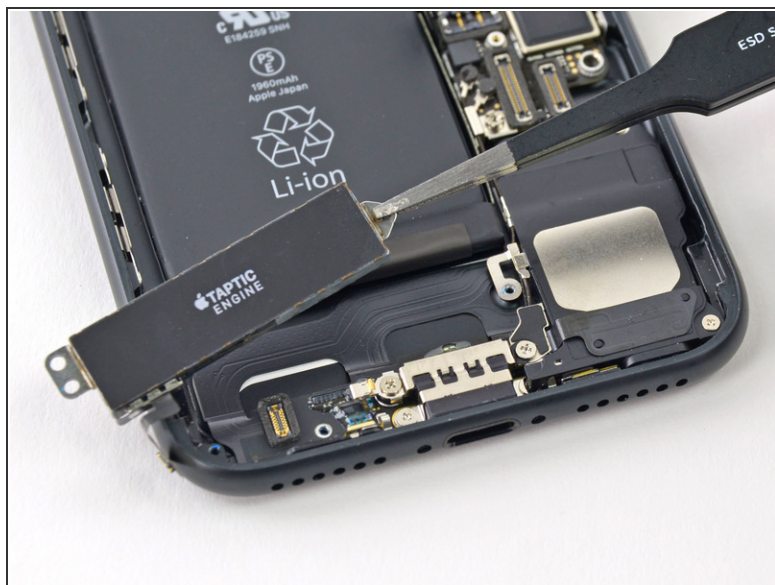

- Remove the Taptic Engine.

## Step 24 — Speaker Assembly




- Remove the Phillips screw securing the Wi-Fi diversity antenna to the rear case:
  - One 3.2 mm screw

## Step 25



- Remove the following three Phillips screws securing the speaker to the rear case:
  - Two 1.3 mm screws
  - One 2.0 mm screw

## Step 26

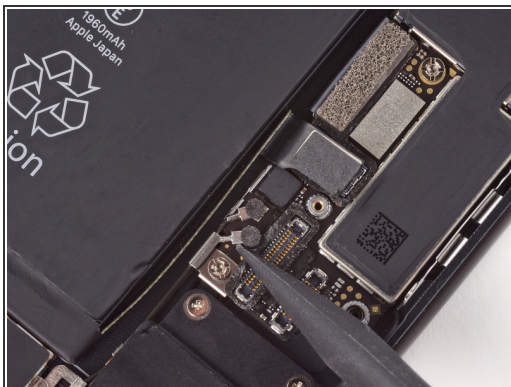

- Use the point of a spudger to lift the two antenna cable connectors up off of the sockets on the logic board.



## Step 27



- Use tweezers to derout the antenna cables from their bracket on the logic board.


## Step 28



- Use tweezers to remove the antenna cables from the clip on the speaker.
- ⚠ Make sure to grasp the cable near the clip in order to avoid damaging the cable.



## Step 29

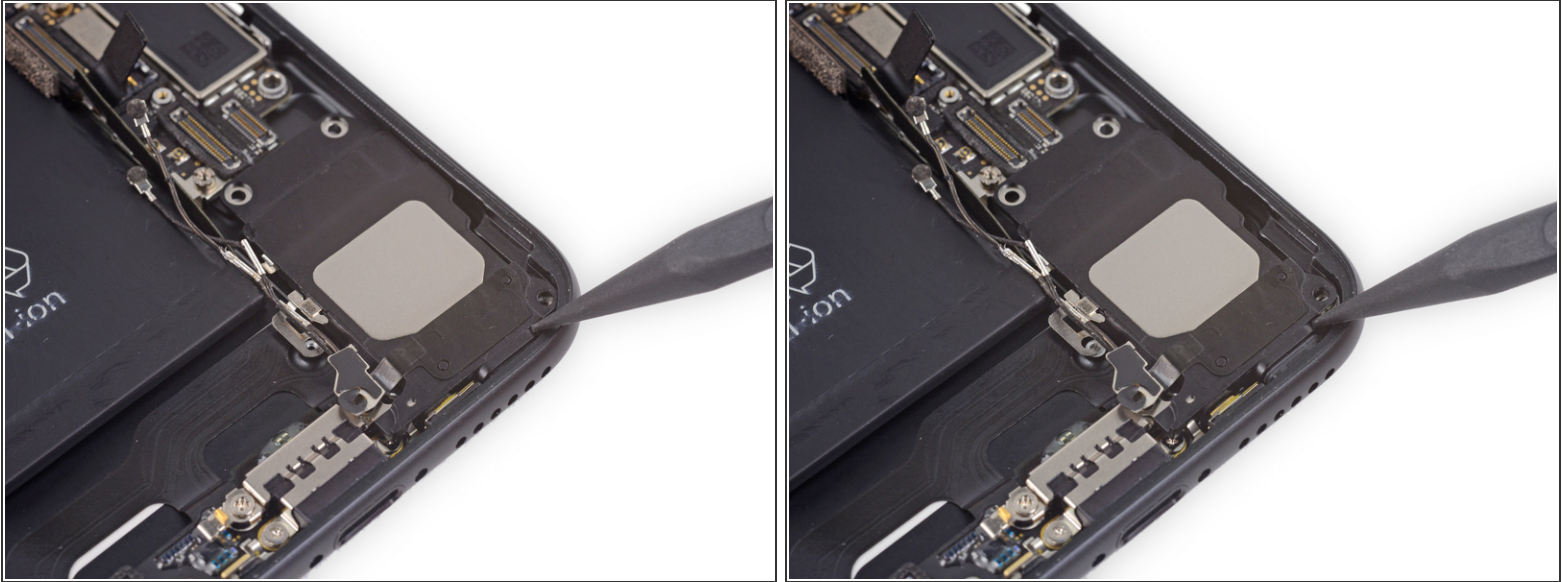

- Use the tip of a spudger to slide the speaker assembly towards the logic board and off of the rear case.

## Step 30



- Remove the speaker.

## Step 31 — SIM Card



- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press to eject the tray.
  - ⓘ This may require a significant amount of force.
- Remove the SIM card tray assembly from the iPhone.
  - ★ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

## Step 32 — Logic Board Connectors



- Use the flat end of a spudger to disconnect the rear-facing camera connector.

## Step 33



- Remove the following Phillips screws securing the rear camera bracket to the rear case:
  - One 1.3 mm screw
  - One 2.5 mm screw

## Step 34



- Remove the bracket.




## Step 35



- Use the pointed end of a spudger to disconnect the camera flash cable connector.

## Step 36

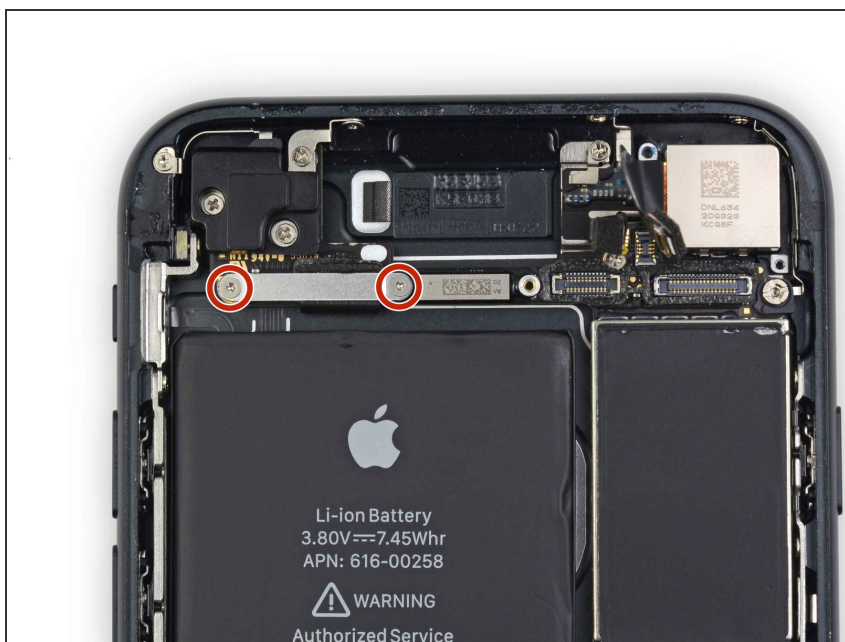

- Remove the two 1.2 mm tri-point screws securing the upper cable bracket.

## Step 37



- Remove the upper cable bracket.


## Step 38



- Use the flat end of a spudger to disconnect the upper cable connector.



## Step 39

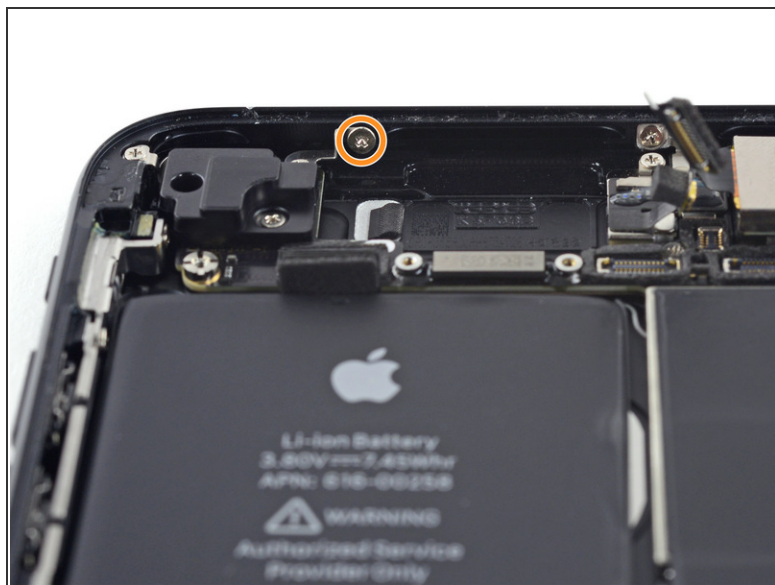

- Remove the Phillips screws securing the Wi-Fi antenna:

- Three 1.2 mm screws
- One 1.7 mm screw

## Step 40



- Remove the top left antenna.



## Step 41



- Remove the following Phillips screws:
  - One 1.3 mm screw
  - One 2.2 mm screw

## Step 42



- Remove the bracket.

## Step 43



- Remove the 2.2 mm standoff screw from the grounding bracket.
- ⓘ You can remove these using an [iPhone Standoff Screwdriver Bit](#), but a small slotted screwdriver will work in a pinch.
- ✦ During reassembly, you can use the tip of a spudger to get the standoff screw started.

## Step 44



- Use tweezers to gently bend the logic board grounding bracket out of the way.



## Step 45 — Lightning Connector Assembly



- Use the point of a spudger to disconnect the lower cable connector.

## Step 46



- Remove the following screws:
  - One 1.4 mm Phillips screw
  - Three 2.2 mm standoff screws
- ① You can remove these using an [iPhone Standoff Screwdriver Bit](#), but a small slotted screwdriver will work in a pinch.



## Step 47




- Use the point of a spudger to move the SIM card eject plunger out of the logic board's way.

## Step 48



- Use the flat end of a spudger to gently lift the battery connector end of the logic board up.
- ⓘ Make sure you're not pulling against any cables. If you feel resistance, check all cables, connectors, and components are clear of the board.

## Step 49

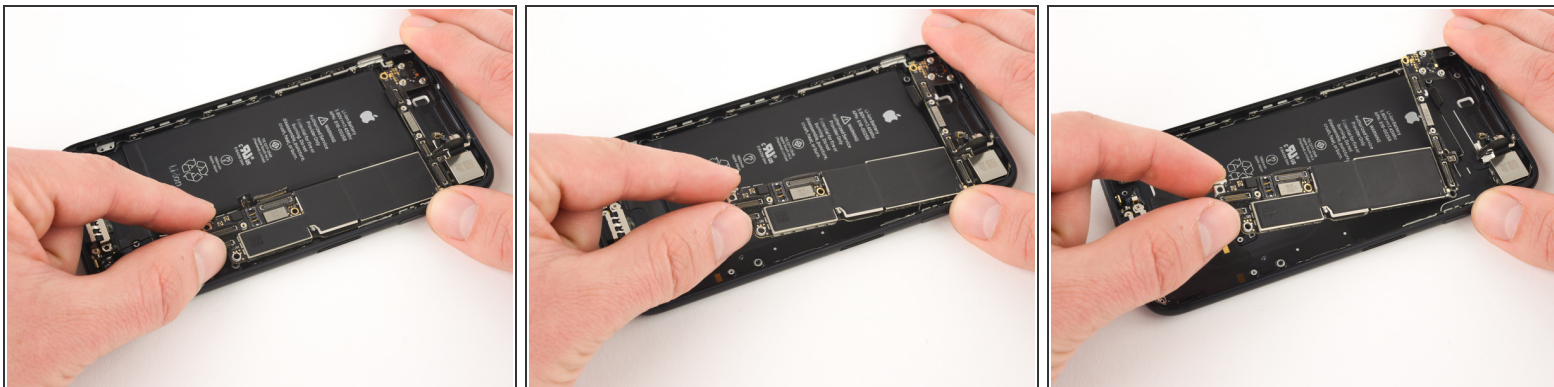

- Lift the battery connector end of the logic board and pull it up and out of the rear case.

⚠ Be careful not to snag the logic board on any cables.

## Step 50



- Remove the 2.9 mm Phillips screw from the lightning connector.



## Step 51




- Remove the spring contact from the lightning connector.

## Step 52



- Remove the two 1.6 mm Phillips screws securing the lightning connector cable in place.

## Step 53

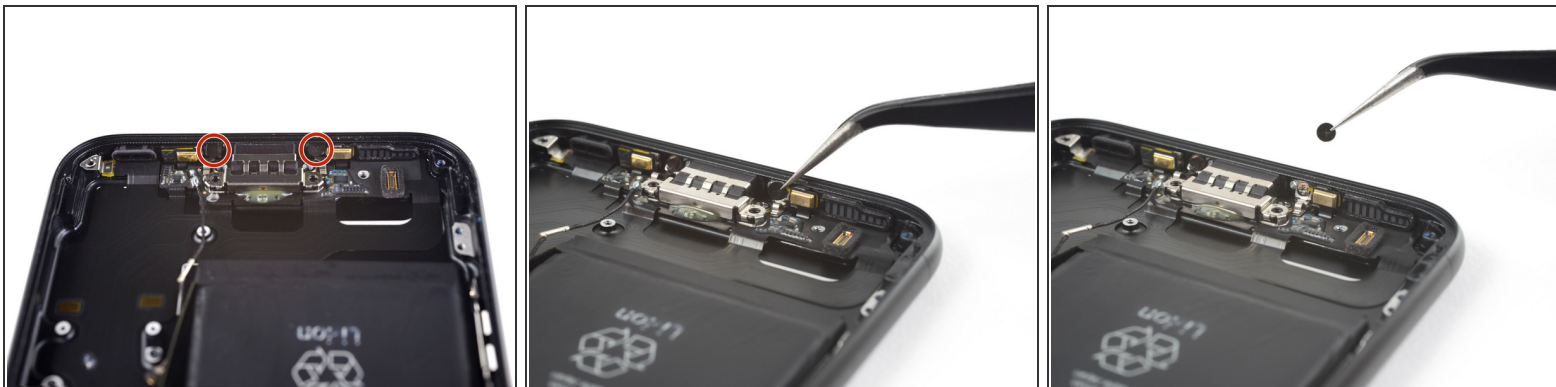

- Remove the two stickers covering the screws that secure the lightning connector to the bottom of the rear case.


## Step 54



- Remove the two 1.3 mm Phillips screws from the rear case.



## Step 55

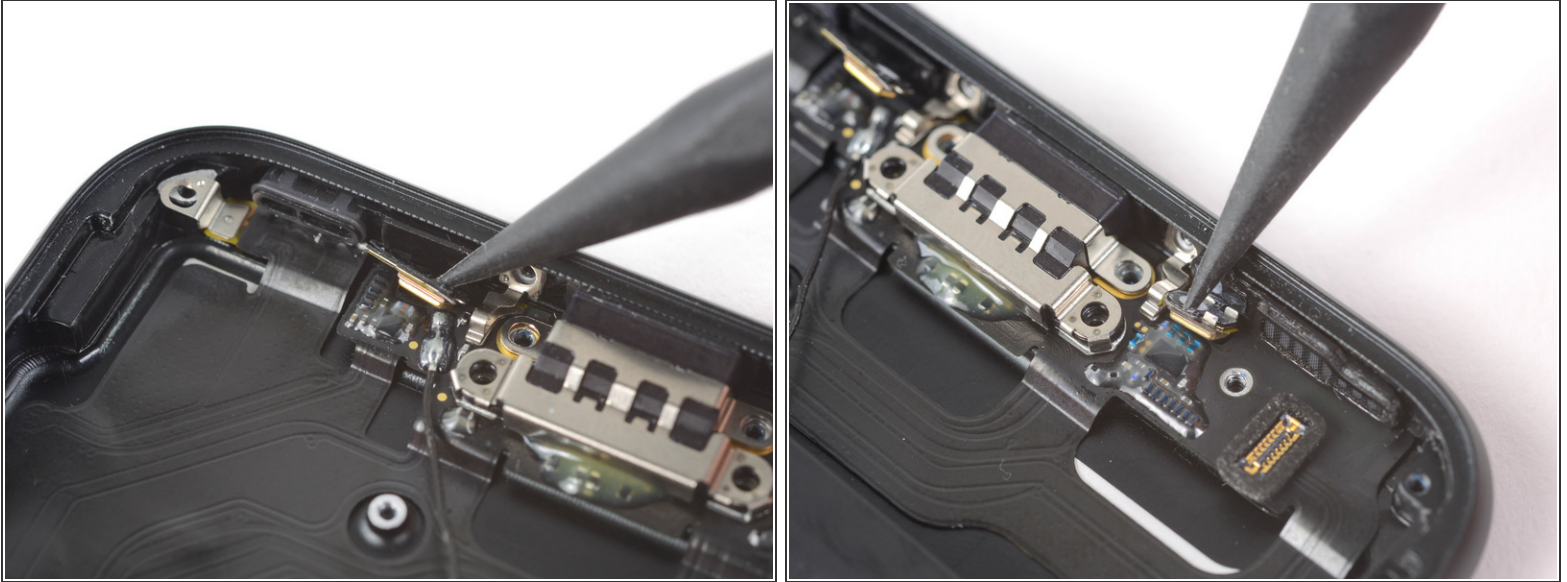

- Use the pointed end of a spudger to separate the two microphones from the bottom of the rear case.

## Step 56



- ① Heating the lower edge of the iPhone will help soften the adhesive securing Lightning connector cable, making it easier to remove.
- Use a hairdryer or [reheat your iOpener](#) to heat the lower edge of the phone.
- Wait for about a minute, allowing the adhesive to warm up before proceeding to the next step.

## Step 57



- Starting from the middle of the phone, Slide an opening pick underneath the lightning connector to separate it from the rear case.


## Step 58



- Continue to slide the pick towards the lightning connector to further separate the assembly from the rear case.



## Step 59

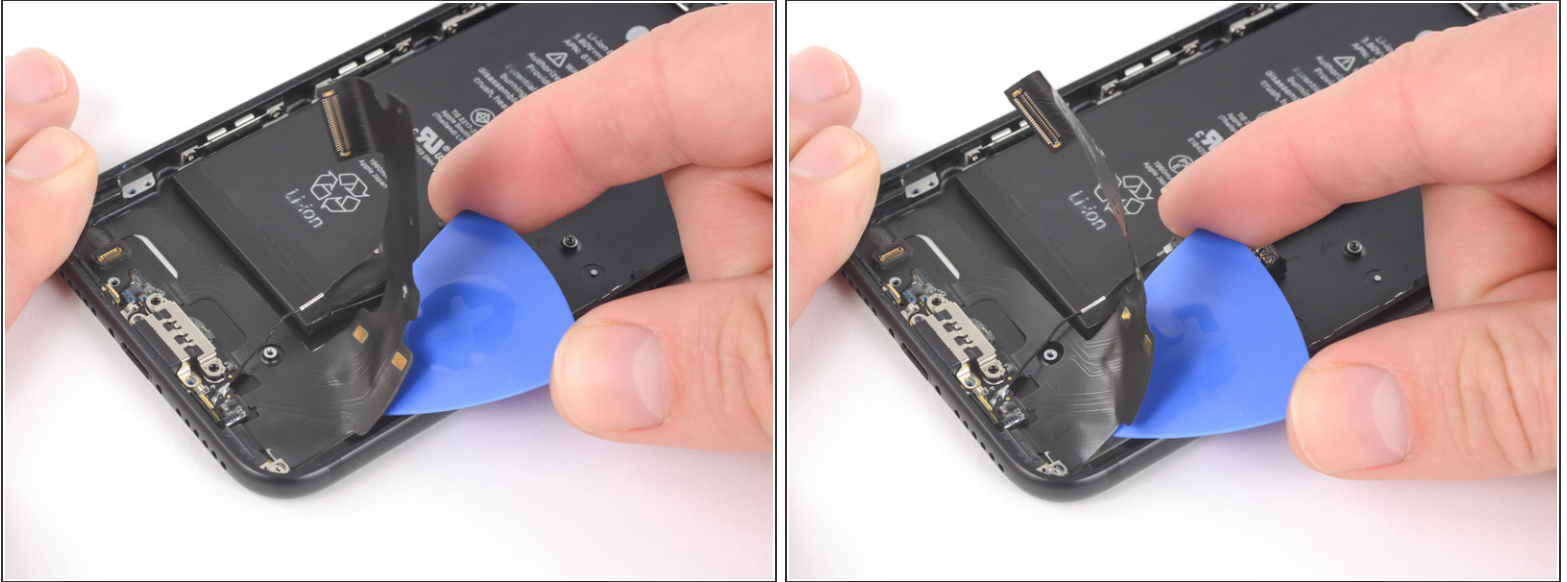

- Continue to slide the pick underneath the lightning connector assembly.
- Stop sliding the pick once it passes the battery.

## Step 60



- Starting at the corner of the phone, slide the pick underneath the assembly towards the lightning connector.
- Stop sliding the pick when it reaches the lightning connector.

## Step 61



- Gently pull the lightning connector out of its hole on the rear case.

## Step 62



- Slide a pick below the lightning connector to further separate the lightning connector assembly from the rear case.
- Continue to slide the pick until the lightning connector assembly is no longer adhered to the rear case.



## Step 63




- Remove the lightning connector assembly.

✦ Before installing or replacing the Lightning connector assembly:

- Use a plastic tool to scour any bits of adhesive residue from the rear case.
- Make sure the Lightning connector assembly is correctly positioned so that the two white dots on the iPhone's rear case show through the two circular cutouts in the Lightning flex cable. If they don't, the flex cable will remain misaligned and you won't be able to [reconnect it to its socket](#) on the logic board.

## Step 64

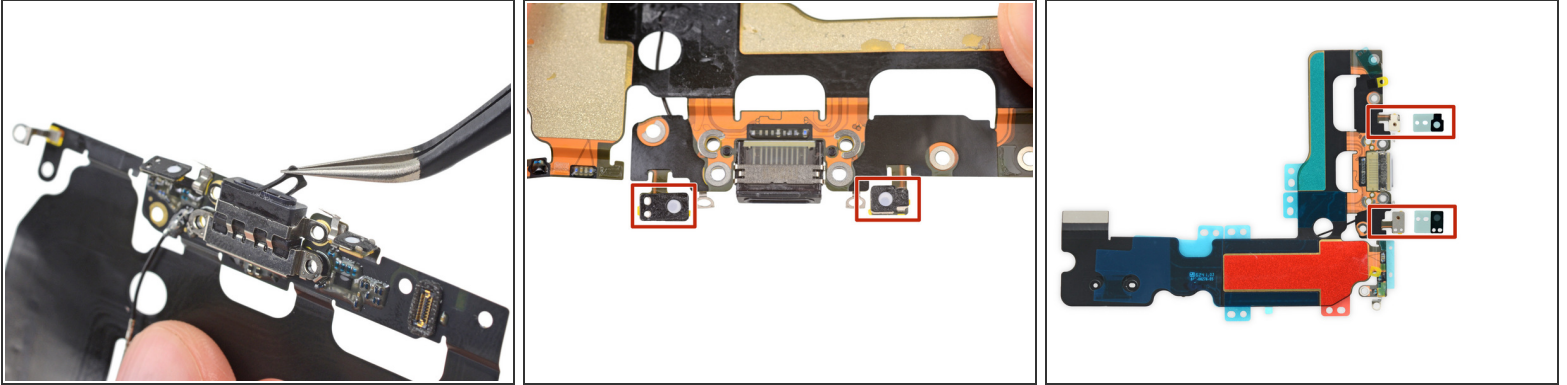

- ✦ A rubber gasket on the bottom of the Lightning connector protects your iPhone from liquid and dust intrusion. If you are installing a new Lightning connector assembly, you may need to carefully remove and transfer the gasket to the new part.
- ✦ The small adhesive patch on the bottom of each microphone also protects your iPhone from liquid and dust intrusion. For best results, replace the two adhesive patches before installing your Lightning connector assembly.

To reassemble your device, [reapply the display adhesive](#) and follow these instructions in reverse order.

This document was last generated on 2017-09-06 12:22:49 PM.